
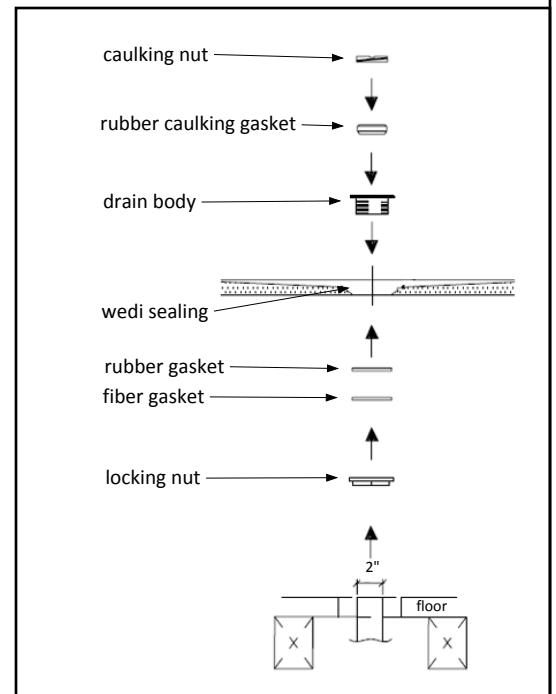


# Wedi Shower Pan (Drain Detail)

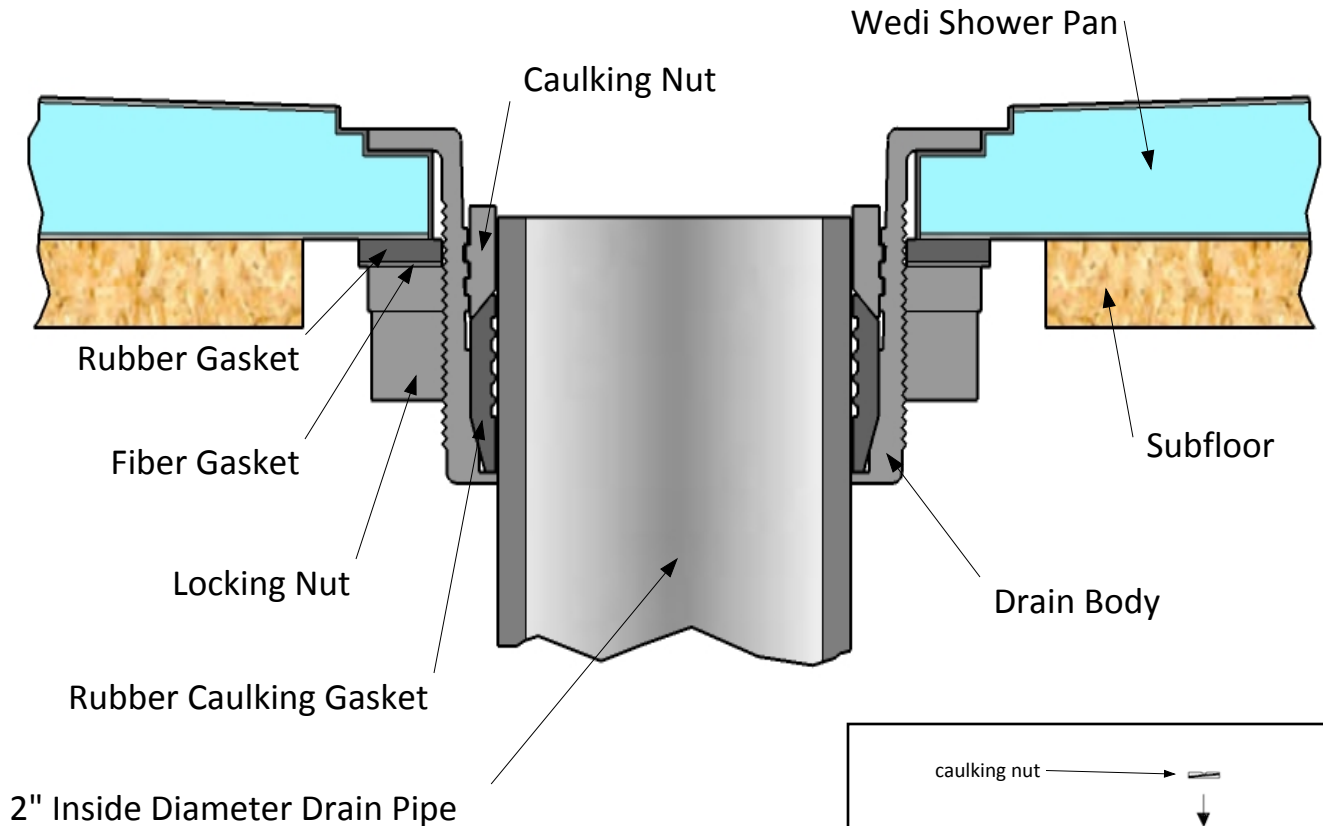


**Note:**

1. Must have at least a 5" diameter hole in subfloor around pipe for drain assembly to fit properly
2. Cut off drain pipe 1/8" above subfloor for best results
3. Rubber Caulking Gasket must fit below top of drain pipe in order to tighten properly

**Wedi Shower Drain  
Installation Detail**

# Wedi Shower Pan

## (Drain Detail - Incorrect Assembly)

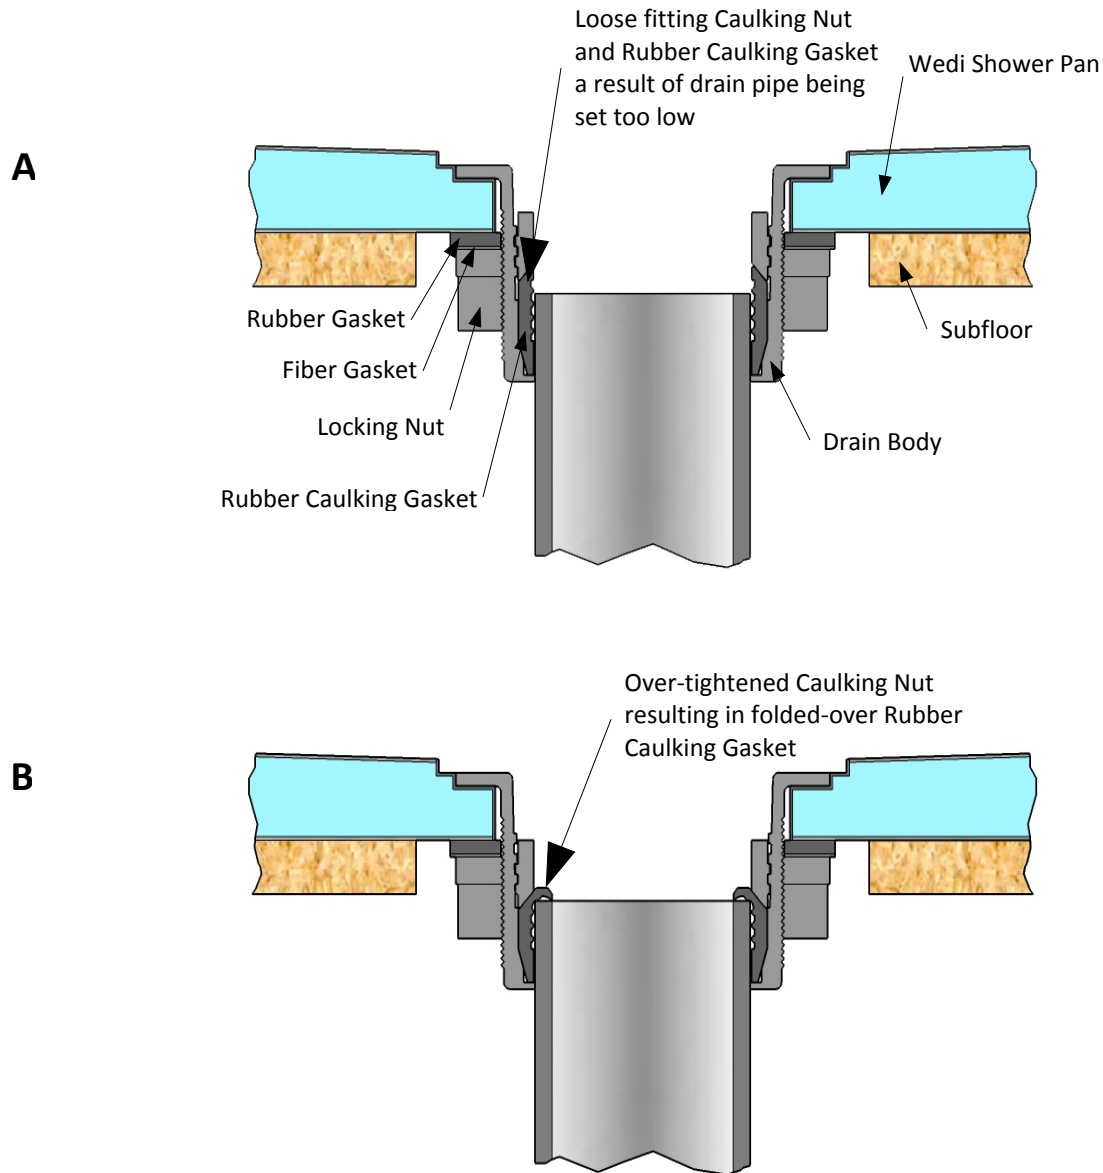

### Incorrect Installation Notes:

**A.** Drain pipe is set below level of subfloor. Rubber Caulking Gasket is not able to be tightened enough to create a tight compression fitting on pipe, resulting in a leak.

**B.** Drain pipe is set below level of subfloor. Caulking nut is over-tightened causing Rubber Caulking Gasket to fold over the top of the drain pipe, resulting in a leak.

Wedi Shower Drain  
Installation Detail